


Removeable Gasket Instructions

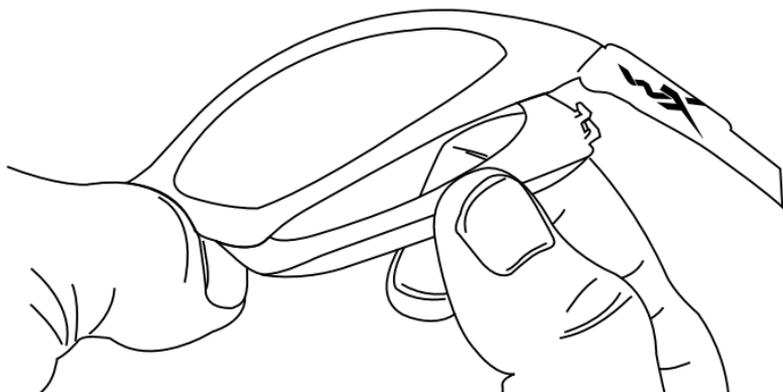

Gasket Installation

1. Locate hooks or tabs on outside of gasket.
2. Locate square shaped holes on inside of frame. (next to hinge)
3. Push hooks or tabs into holes on one side of frame (Make sure gasket is lined up to match nose bridge)
4. Repeat on opposite side of frame.

Gasket Removal

1. Grab outside edge of gasket, below the hinge, and pull straight out. Gasket should release.
2. Repeat on opposite side.